


## Cockpit

## Cockpit

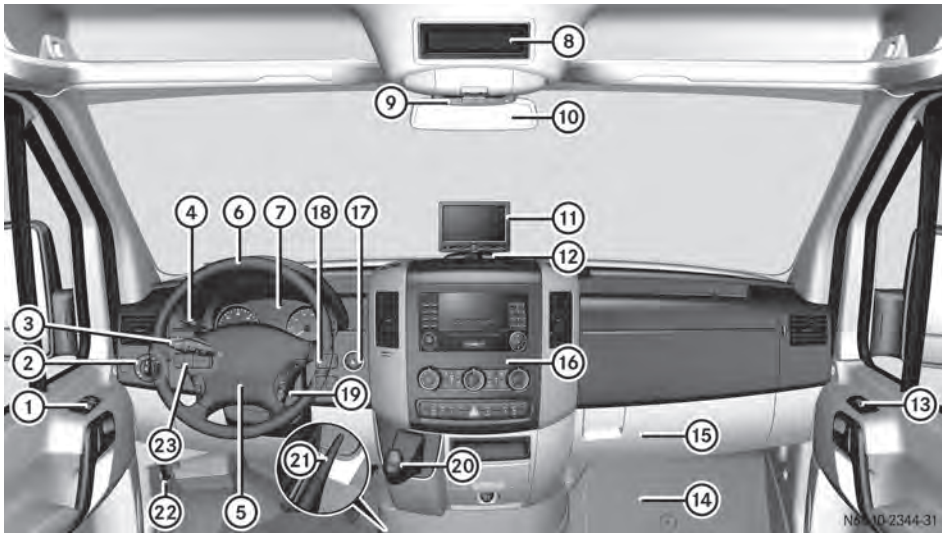

**1** This Operator's Manual describes all the standard and optional equipment available for your vehicle at the time of purchase. Country specific differences are possible. Please note that your vehicle might not be equipped with all the functions described here. This also includes safety relevant systems and functions.

	Function	Page
①	Door control panel	28
②	Light switch	89
③	Combination switch: <ul style="list-style-type: none"> <li>• turn signals</li> <li>• high-beam headlamps</li> <li>• windshield wipers</li> <li>• rear window wiper</li> </ul>	90 90 94 94
④	Cruise control lever	118
⑤	Horn	
⑥	Steering wheel without/with buttons	26

	Function	Page
⑦	Instrument cluster	24
⑧	Stowage compartment	
⑨	• Stowage compartment with interior light • Overhead control panel	92 27
⑩	Rear-view mirror	69
⑪	Rear-view camera monitor	122
⑫	PARKTRONIC warning display	119
⑬	Opens/closes the right-hand side window	60
⑭	Jack and vehicle tool kit	182
⑮	Glove box	131
⑯	Center console	26
⑰	Ignition lock	56
⑱	Additional switch unit	28

	Function	Page
⑲	Steering wheel adjustment	69
⑳	Selector lever (automatic transmission)	109
㉑	Parking brake	112

	Function	Page
㉒	Opens the hood	168
㉓	Additional switch unit	28



 

 
 

 

 


 




## Instrument cluster variants



 



 







N54.32-2756-31

	Function	Page
①	<b>Instrument cluster on vehicles without steering-wheel buttons</b>	70
②	Indicator and warning lamps	
③	⊕, ⊖ Brightens/dims the instrument cluster lighting	72
④	Tachometer with indicator and warning lamps	71
⑤	Display	73
⑥	Fuel gauge with fuel filler flap location indicator	72
⑦	Speedometer with indicator and warning lamps	71
⑧	Reset button ⊕	70
⑨	Ⓜ Menu button: • changes standard display • selects menus	73 73


	Function	Page
⑩	<b>Instrument cluster on vehicles with steering-wheel buttons</b>	70
⑪	Indicator and warning lamps	
⑫	Display	74
⑬	Tachometer with indicator and warning lamps	71
⑭	Fuel gauge with fuel filler flap location indicator	72
⑮	⊕, ⊖ Brightens/dims the instrument cluster lighting	72
⑯	Speedometer with indicator and warning lamps	71
⑰	Reset button ⊕	70
⑱	Ⓜ Service button Checks the engine oil level	171
	<b>Indicator and warning lamps</b>	

	Function	Page
	ESP® warning lamp	50, 187
	ASR warning lamp	48, 187
	Coolant level too low	193
	Coolant temperature too high	193
	Restraint systems malfunction	191
	Brake fluid level too low	188
	EBD malfunction	187
	Trailer brake force booster malfunction	188
	Engine oil level warning	192
	Engine diagnostics indicator lamp	194
	Exhaust gas aftertreatment malfunction	195
	Preglow system	194
	Left-hand turn signal	90
	Tire pressure loss or the tire pressure monitor is malfunctioning (USA only)	195
	Tire pressure loss (Canada only)	195
	Fluid level too low in windshield washer/headlamp cleaning system	196
	Door open	197
	Brake pads/linings worn	191
	Right-hand turn signal	90
	ABS malfunction	189
	ASR malfunction	189
	BAS malfunction	189
	ESP® malfunction	187

	Function	Page
	DEF supply low or contaminated/thinned	199
	Exhaust gas aftertreatment malfunction	200
	Dirt accumulation in air filter	195
	Reserve fuel	193
	Fuel filler cap open	194
	Water in the fuel	196
	Battery charging malfunction	191
	Bulb defective	197
	Parking brake applied	112
	Low-beam headlamps on	89
	Working speed governor (ADR) on	117
	High-beam headlamps on	90
	Reserve fuel	193
	Fuel filler cap open	194
	Fasten seat belt	196

**i** Vehicles with steering-wheel buttons: Corresponding messages may also be shown in display ⑫ (▷ page 24).

## Steering wheel with buttons

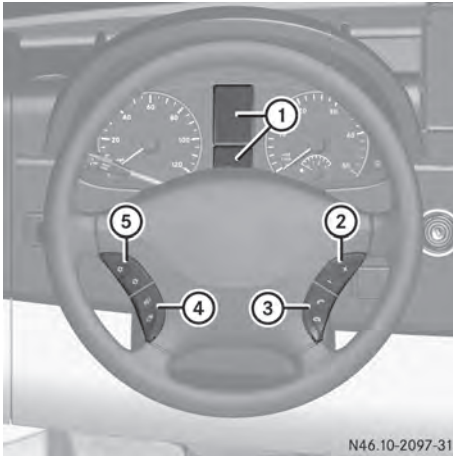

N46.10-2097-31

	Function	Page
①	Display	74
	<b>Controls the on-board computer</b>	
②	Selects a submenu or adjusts the volume <input type="checkbox"/> Up/increases the volume <input type="checkbox"/> Down/reduces the volume	74
③	Using the telephone <input type="checkbox"/> Accepts a call/starts dialing <input type="checkbox"/> Ends a call/rejects an incoming call	86
④	Scrolling from one menu to another <input type="checkbox"/> Forwards <input type="checkbox"/> Back	74
⑤	Scrolling from one submenu to another <input type="checkbox"/> Forwards <input type="checkbox"/> Back	74

## Center console



N43.10-2352-31

	Function	Page
①	Stowage compartment	130
②	Radio; see the separate operating instructions	
③	Air-conditioning control panel	97
④	Center console switch unit	27
⑤	<ul style="list-style-type: none"> <li>Stowage compartment or</li> <li>CD changer; see the separate operating instructions</li> </ul>	
⑥	Cup holder with <ul style="list-style-type: none"> <li>ashtray</li> <li>cigarette lighter</li> </ul>	132 128 129
⑦	12 V socket	133


## Switch units

## Center console



	Function	Page
	Switches the left/right-hand seat heating on/off	68
	Switches the windshield heating on/off	95
	Switches the rear window defroster on/off	95
	Activates/deactivates PARKTRONIC	122
	Switches the hazard warning lamps on/off	91
	Activates/deactivates ASR	48
	Central locking, interior/rear compartment	54

## Roof

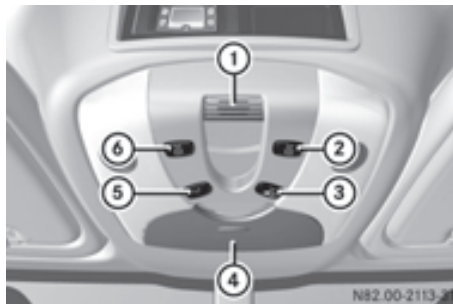


	Function	Page
①	Microphone for the telephone	134
②	Switches the right-hand reading lamp on/off	92
③	Switches the automatic interior lighting on/off	92
④	<ul style="list-style-type: none"> <li>• Eyeglasses compartment or</li> <li>• Anti-theft alarm system (ATA)</li> </ul>	131 61
⑤	Switches the interior lighting on/off	92
⑥	Switches the left-hand reading lamp on/off	92

## Driver's door



	Function	Page
①	Adjusts the exterior mirrors	70
②	Selects an exterior mirror	70
③	Opens/closes the left-hand side window	61
④	Opens/closes the right-hand side window	61

## Additional switch units

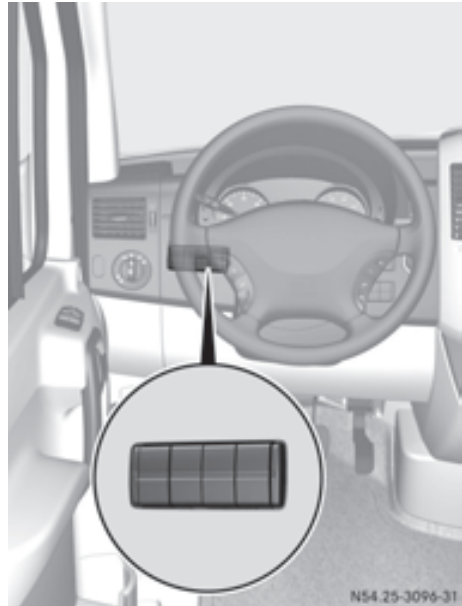


Switch unit between the light switch and the steering wheel

	Function	Page
	Switches the auxiliary heating on/off	104
	Switches the heater booster function on/off	104
	Sets the working speed	117
	Switches the working speed governor (ADR) on/off	117
	Ventilates the cargo compartment	108



Switch unit between the steering wheel and ignition lock

	Function	Page
	Switches the rear-compartment convenience lighting on/off	92
