

Table Of Contents

Ikarus OS & Ikarus NMS	1
System User's Guide	1
Version Issue: Version 1.0b.....	1
Last Update:.....	1
1 Introduction.....	11
2 Product Overview	11
2.1 Compatibility and Requirements	11
2.2 Features List.....	11
2.2.1 Ikarus Network Management System.....	11
2.2.2 Ikarus Operating System.....	12
2.3 Ikarus NMS Installation Guide	12
2.4 Ikarus OS Installation Guide.....	13
2.4.1 Download Ikarus O.S.....	13
2.5 Host System Requirements and Installation Procedure	13
2.5.1 Using Raw Image on a Compact Flash (CF):	13
2.5.2 Using Raw Image on a Hard drive:.....	13
2.5.3 Using ISO Image:	14
2.6 Connect and Configure	14
2.6.1 Ikarus Initial State	14
2.6.2 Ikarus Access Options.....	15
3 Ikarus OS Management via INMS.....	17
3.1 Introduction.....	17
3.2 Network Topology	17
3.2.1 Ikarus Node Insertion.....	18
3.3 Ikarus Node Management	20
4 IP Networking Configuration	22
4.1 Left Frame:.....	22

4.2	Top Frame:.....	23
4.3	Center Frame:.....	24
4.4	Bottom Frame	24
4.4.1	Network Bridge.....	24
4.4.2	Virtual Interfaces	25
4.5	Table view.....	26
5	Static IP Routing.....	28
5.1	Introduction.....	28
5.2	Ikarus Static IP routing configuration.....	28
5.2.1	Routing Tables	28
5.2.2	Routing Entries Handling	30
5.3	Ikarus Static Rules	32
5.3.1	Introduction.....	32
5.3.2	Rule Entries Handling.....	32
6	Wireless Configuration.....	35
6.1	General Description	35
6.2	Operational Modes.....	37
6.2.1	Access Point.....	37
6.2.2	WDS mode.....	39
6.2.3	Repeater Mode	40
6.2.4	AP Client and Station Mode	42
6.3	Radio Settings	44
6.4	Security Settings	47
6.4.1	WEP configuration.....	47
6.4.2	WPA Configuration	48
6.4.3	Access Control List.....	50
6.5	Outdoor Settings	51
6.6	Setting Country Code.....	52
6.7	Site Survey Operation	53
6.8	Wireless topologies Scenarios	56
6.8.1	How to make a Point To Point Link	56
6.8.2	BSSID extended Repetition	58
7	Firewall and NAT	60

7.1	Firewall and NAT Chains	60
7.2	Field explanation.....	62
7.2.1	Firewall Matching fields	62
7.2.2	NAT Matching fields	67
7.2.3	Examples.....	70
8	DHCP	75
8.1	Introduction.....	75
8.2	DHCP SERVER.....	75
8.2.1	Lease Times	78
8.3	DHCP CLIENT.....	79
8.4	DHCP RELAY.....	79
9	WAN Configuration.....	81
9.1	PPPOE CLIENT	81
9.2	PPTP CLIENT	84
10	Bandwidth Manager	88
10.1	General.....	88
10.2	Field explanation.....	88
10.2.1	Shaped IP:	88
10.2.2	Source/Destination IP:	89
10.2.3	Source/Destination Port:	89
10.2.4	Bandwidth Type:.....	89
10.2.5	Peer To Peer:.....	89
10.2.6	Interface:	89
10.2.7	Bandwidth limit:	89
10.3	Examples.....	89
10.3.1	Limiting bandwidth of whole subnets.....	89
10.3.2	Limiting Peer to Peer Traffic	93
10.3.3	Tree-based mode: Limiting a host to some rate, but for a specific port use a smaller rate.....	96
11	Ikarus HOTSPOT wizard	99
11.1	General HotSpot Description.....	99
11.2	HotSpot Main Panel.....	99
11.2.1	Enable HotSpot:	99

11.2.2	Status:	99
11.2.3	Admin MAC:	99
11.2.4	Users Info.....	100
11.2.5	Radius Statistics	100
11.3	Wizard Configuration	100
	Wizard configuration is initialized by pressing “Start Wizard” button in the corresponding configuration panel.	100
11.3.1	Wan:	100
11.3.2	LAN:.....	101
11.3.3	DHCP:	101
11.3.4	NAT & Protection:.....	102
11.3.5	Wireless:	106
11.3.6	Radius:	106
11.3.7	Authentication Type:	107
11.3.8	Walled Garden:.....	108
11.3.9	Advertisement:	108
11.3.10	Web customization:.....	108
11.3.11	Summary:	109
11.3.12	Submit:	109
11.4	Back end Radius Configuration.....	109
11.5	Example	111
11.5.1	STEP 1:	113
11.5.2	STEP 2:	113
11.5.3	STEP 3:	113
	Clicking <i>Next</i> will redirect user to the next panel.....	114
11.5.4	STEP 4:	114
	Clicking <i>Next</i> will redirect user to the next panel.....	115
11.5.5	STEP 5:	115
	Clicking <i>Next</i> will redirect user to the next panel.....	116
11.5.6	STEP 6:	116
	Clicking <i>Next</i> will redirect user to the next panel.....	117
11.5.7	STEP 7:	117
	Clicking <i>Next</i> will redirect user to the next panel.....	118
11.5.8	STEP 8:	118
	Clicking <i>Next</i> will redirect user to the next panel.....	120
11.5.9	STEP 9:	120
	Clicking <i>Next</i> will redirect user to the next panel.....	120
11.5.10	STEP 10:	121

Clicking <i>Next</i> will redirect user to the next panel.....	121
11.5.11 STEP 11:	121
Clicking <i>Next</i> will redirect user to the next panel.....	122
11.5.12 STEP 12:	122
Clicking <i>Next</i> will redirect user to the next panel.....	123
11.5.13 STEP 13:	123
11.5.14 STEP 14:	124
11.5.15 STEP 15:	125
11.6 Troubleshooting.....	130
12 System Services Configuration	132
12.1 Services Overview	132
12.2 SNMP.....	132
12.3 HTTP.....	133
12.4 SSH	134
12.5 NTP	135
12.6 Administrator Security Settings.....	137
13 License Manager	138
14 Discovery Manager	139
15 Mrtg Support.....	140
16 Ikarus Monitoring and Statistics.....	141
16.1 Introduction.....	141
16.2 Status Info	141
16.3 Current Throughput	141
16.4 Packet Statistics	142
16.5 ARP table entries	143
16.6 Open connections:.....	144
16.7 System properties:.....	144

Table Of Figures

Figure 2-1:Serial interface Configuration.....	15
Figure 3-1:INMS Topology View	17
Figure 3-2:Insert Ikarus Node Dialog.....	18
Figure 3-3:Ikarus Node Insertion.....	19
Figure 3-4:Customized Topology View	20
Figure 3-5:Ikarus node pop-up menu.....	21
Figure 4-1:IP Interface Settings	23
Figure 4-2:IP Global Settings	24
Figure 4-3:Insertion of virtual interfaces	26
Figure 4-4:Interface tree view.....	27
Figure 5-1:Routing Table Handling.....	29
Figure 5-2:Insert new Route	30
Figure 5-3:New Routing Entry Added.....	31
Figure 5-4:New Routing Rule Insertion	33
Figure 6-1:Wireless Configuration Panel	35
Figure 6-2:Wireless Operational Mode Settings.....	37
Figure 6-3:Wireless WDS Mode Settings.....	40
Figure 6-4:Repeater Topology	41
Figure 6-5:Repeater Mode Settings	42
Figure 6-6:Station Mode Settings	43
Figure 6-7:Station Mode Settings (2)	44
Figure 6-8:Wireless Radio Settings	45
Figure 6-9:Setting Tx Rate.....	46
Figure 6-10:Wireless Radio Settings (2).....	47

Figure 6-11:Wireless WEP Settings	48
Figure 6-12:Wireless WPA Settings.....	49
Figure 6-13:Wireless WPA Settings (2)	50
Figure 6-14:Wireless ACL configuration	51
Figure 6-15:Wireless Outdoor Settings	52
Figure 6-16:Wireless CC Code.....	53
Figure 6-17:Site Survey Operation	54
Figure 6-18:Site Survey Align.....	55
Figure 6-19:WDS Topology Example.....	56
Figure 6-20:Point to Point Topology Example.....	57
Figure 6-21:Ikarus Extended Repetition Topology Example	59
Figure 7-1:Packet flow diagram.....	60
Figure 7-2:Firewall chains	61
Figure 7-3:NAT chains	62
Figure 7-4:Basic Rule configuration.....	66
Figure 7-5:Advanced Rule configuration	67
Figure 7-6:Basic Rule configuration.....	71
Figure 7-7:Advanced Rule configuration	71
Figure 7-8:FireWall Mail Panel	72
Figure 7-9:Rule that masquerades outgoing traffic to internet	73
Figure 7-10:masquerade rule is added	74
Figure 9-1:PPPoE Configuration (1)	81
Figure 9-2:PPPoE Protocol Selection	82
Figure 9-3:Wan Interface Configuration	83
Figure 9-4:PPPoE - Enable on Demand Settings.....	84

Figure 9-5:WAN - PPTP Settings.....	85
Figure 9-6:PPTP Interface	86
Figure 10-1:Network topology	90
Figure 10-2:Downlink rate for Company 1	91
Figure 10-3:Downlink rule is added	91
Figure 10-4:Uplink rate for Company 1	92
Figure 10-5:Added bandwidth Rules	92
Figure 10-6:Added bandwidth Rules	93
Figure 10-7:Network topology	93
Figure 10-8:Rule limiting downlink Peer to Peer Traffic.....	94
Figure 10-9:Rule limiting uplink Peer to Peer Traffic.....	95
Figure 10-10:Peer to Peer Rules	95
Figure 10-11:Peer to Peer FlowMark Rule is added.....	96
Figure 10-12:Network topology	97
Figure 10-13:General rule.....	97
Figure 10-14:Specific rule for port 23	98
Figure 11-1:Network topology	111
Figure 11-2:Network topology after Hotspot	112
Figure 11-3:HotSpot Main Panel	113
Figure 11-4:Wan configuration.....	114
Figure 11-5:Lan configuration.....	115
Figure 11-6:HotSpot's DHCP server configuration	116
Figure 11-7:NAT & Protection Level configuration	117
Figure 11-8:Wireless configuration	118
Figure 11-9:Radius configuration	119

Figure 11-10:Authentication methods	120
Figure 11-11:Walled Garden configuration.....	121
Figure 11-12:Redirection URLs configuration.....	122
Figure 11-13:Web page customization	123
Figure 11-14:Summarize configuration.....	124
Figure 11-15:Start hotspot	125
Figure 11-16:HotSpot is initializing	126
Figure 11-17:HotSpot is running	127
Figure 11-18:Interface Panel after hotspot's initiation	128
Figure 11-19:New firewall settings	129
Figure 11-20:NAT settings	129
Figure 11-21:HotSpot has assigned an IP address.....	130
Figure 11-22:User is redirected to fill in his/her information.....	130
Figure 12-1:SNMP service configuration.....	133
Figure 12-2:HTTP service configuration.....	134
Figure 12-3:SSH service configuration	135
Figure 12-4:NTP service configuration	136
Figure 12-5:Change administrator's password	137
Figure 13-1:License Manager Panel	138
Figure 14-1:Discovery Manager Panel	139
Figure 15-1:Mrtg display statistics	140
Figure 16-1:Real Time Interface Throughput.....	142
Figure 16-2:Interface Packet Statistics	142
Figure 16-3:ARP Entries Table	143
Figure 16-4:Open Connections Display.....	144

Figure 16-5: System Properties Dialog 145