

Contents

About This Guide	v
Safety Precautions	v
Hardcopy Publications Shipped with the 2212	v
Softcopy Publications Shipped on the CD-ROM	vi
Publications on the Internet	vi
Ordering IBM Publications	vii
Obtaining Updates and Corrections	vii
Summary of Changes	vii
 Chapter 1. Installing the 2212	 1-1
Before You Begin	1-1
Pre-installation Requirements	1-1
Begin Installation	1-2
 Chapter 2. Problem Solving	 2-1
Reset Button	2-3
LED Indicators	2-4
 Chapter 3. Accessing the IBM 2212	 3-1
Access Methods	3-1
Attaching an ASCII Terminal	3-3
Bringing Up a Command Line Console	3-6
Managing the Operational and Configuration Software	3-7
 Chapter 4. Performing the Initial Configuration	 4-1
Setting Up the IBM 2212 Initial Configuration	4-1
Full Configuration	4-3
 Appendix A. Common Tasks	 A-1
Accessing the Bootstrap Menus	A-3
Accessing the OPCODE Command Line Interface	A-3
Accessing OPCODE from the Bootstrap Menus	A-4
Accessing OPCODE from SVC>	A-4
Navigating Through the OPCODE Command Line Interface	A-4
Accessing the Service Recovery Prompt (SVC>)	A-5
Adapter Tasks	A-6
Changing the Service Port Speed	A-12
Disabling Dumping	A-13
Enabling Dumping	A-14
Entering Vital Product Data	A-17
Getting Up-to-Date IBM 2212 Information	A-17
Getting Software Updates from the Web	A-17
Interface Tasks	A-18
Managing Operational Code and Configuration Files	A-19
Resetting the IBM 2212	A-30
Running Quick Configuration	A-31
Viewing Hardware and Software Vital Product Data	A-31
 Appendix B. Notices	 B-1
Notice to Users of Online Versions of This Book	B-1