

# Contents Booklet

<b>About This Booklet</b> . . . . .	v	Exchanging a Standard System Card . . . . .	13
Before You Start . . . . .	v	Exchanging a High-Performance System Card . . . . .	14
Equipment You Need . . . . .	v	<b>Chapter 4. Upgrading from a Standard System Card to a High-Performance System Card</b> . . . . .	17
Safety Precautions . . . . .	v	<b>Chapter 5. Exchanging a DRAM Feature</b> . . . . .	19
Disconnecting the Power Cord . . . . .	v	Exchanging a DRAM Feature on a Standard System Card . . . . .	19
Reconnecting the Power Cord . . . . .	v	Exchanging a DRAM Feature on a High-Performance System Card . . . . .	20
Handling Static-Sensitive Devices . . . . .	vi	<b>Chapter 6. Notices</b> . . . . .	23
<b>Chapter 1. Installing a PMC Adapter</b> . . . . .	1	Notice to Users of Online Versions of This Book . . . . .	23
Installing a PMC Adapter on a Standard System Card . . . . .	1	Trademarks . . . . .	23
Installing a PMC Adapter on a High-Performance System Card (FRU PN 02L2370) . . . . .	2	<b>Chapter 7. Safety Information</b> . . . . .	25
Installing a PMC Adapter on a High-Performance System Card (Not for FRU PN 02L2370) . . . . .	4	<b>Readers' Comments — We'd Like to Hear from You</b> . . . . .	35
<b>Chapter 2. Exchanging a PMC Adapter</b> . . . . .	7		
Exchanging a PMC Adapter on a Standard System Card . . . . .	7		
Exchanging a PMC Adapter on a High-Performance System Card (FRU PN 02L2370) . . . . .	9		
Exchanging a PMC Adapter on a High-Performance System Card (Not for FRU PN 02L2370) . . . . .	11		
<b>Chapter 3. Exchanging a System Card</b> . . . . .	13		

**DANGER**  
Before you begin to install this product, read the safety information in *Caution, Safety Information—Read This First*, SY21-0000. This book contains safe procedures for working and plugging in electrical equipment.

Note: For translations of safety notices, see "Chapter 7. Safety Information."

"Chapter 7. Safety Information" on page 25