

Contents

About This Manual	v
Who Should Read This Manual	v
Safety Precautions	v
Hardcopy Publications Shipped with the 2212	v
Softcopy Publications Shipped on the CD-ROM	vi
Publications on the Internet	vi
Ordering IBM Publications	vii
Obtaining Updates and Corrections	vii
Summary of Changes	vii
Chapter 1. Problem Determination	1-1
Where to Begin	1-1
Reset Button	1-2
LED Indicators	1-2
Maintenance Analysis Procedures	1-9
Service Kit (PN 04H8169)	1-19
Chapter 2. Removal and Replacement Procedures	2-1
Before You Start	2-1
Part Exchange Directory	2-2
Removing and Reinstalling the Cover	2-4
Exchanging a Blower in Models 4xx	2-6
Exchanging a PMC Adapter	2-7
Exchanging a CPCI Adapter	2-10
Exchanging a Standard System Card	2-12
Exchanging a High-Performance System Card	2-14
Upgrading from a Standard System Card to a High-Performance System Card	2-16
Exchanging a DRAM Feature	2-19
Exchanging a Compact Flash Feature	2-22
Removing and Returning a Model 1xx Chassis with and without a Hard Drive	2-23
Removing and Returning a Model 4xx Chassis with and without a Hard Drive	2-24
Installing a Model 1xx Chassis without a Hard Drive	2-24
Installing a Model 1xx Chassis with a Hard Drive	2-26
Installing a Hard Drive Upgrade Feature in a Model 1xx Chassis	2-28
Replacing a Suspect Hard Drive in a Model 1xx	2-31
Installing a Model 4xx Chassis without a Hard Drive	2-33
Installing a Model 4xx Chassis with a Hard Drive	2-34
Installing a Hard Drive Upgrade Feature in a Model 4xx Chassis	2-36
Replacing a Suspect Hard Drive in a Model 4xx	2-39
Removing an Enabler	2-41
Installing an Enabler	2-43
Installing a Digital Modem Adapter	2-45
Installing a Digital Modem Adapter Upgrade	2-47
Chapter 3. Accessing the IBM 2212	3-1
Access Methods	3-1
Attaching an ASCII Terminal	3-3
Bringing Up a Command Line Console	3-6
Managing the Operational and Configuration Software	3-7

Chapter 4. Using the IBM 2212 Bootstrap Menus	4-1
Using the Bootstrap Utilities	4-3
Selecting the Boot Mode	4-6
Selecting POST Mode	4-7
Issuing a Reset	4-8
Chapter 5. Bootstrap Error Codes	5-1
Chapter 6. Using Diagnostics	6-1
Overview of Diagnostic Functions and Status Information	6-1
Starting Diagnostics	6-2
Testing the Adapters	6-8
Appendix A. Parts Listing	A-1
Appendix B. 2212 Field Replaceable Units Listing	B-1
Appendix C. Hardware Characteristics	C-1
Physical Specifications	C-1
Performance	C-2
Power Supply	C-2
Appendix D. Additional Warranty Information	D-1
Appendix E. Common Tasks	E-1
Accessing the Bootstrap Menus	E-2
Accessing the OPCON Command Line Interface	E-2
Accessing OPCON from the Bootstrap Menus	E-2
Accessing OPCON from SVC>	E-3
Navigating Through the OPCON Command Line Interface	E-3
Accessing the Service Recovery Prompt (SVC>)	E-4
Adapter Tasks	E-5
Changing the Service Port Speed	E-9
Disabling Dumping	E-10
Enabling Dumping	E-11
Entering Vital Product Data	E-14
Getting Up-to-Date IBM 2212 Information	E-14
Getting Software Updates from the Web	E-14
Interface Tasks	E-15
Managing Operational Code and Configuration Files	E-16
Resetting the IBM 2212	E-26
Running Quick Configuration	E-27
Viewing Hardware and Software Vital Product Data	E-27
Appendix F. Notices	F-1
Notice to Users of Online Versions of This Book	F-1
Electronic Emission Notices	F-2
Trademarks	F-7
Safety Information	F-8
Glossary	X-1
Index	X-11