
Contents

Communications Statements	vii
Federal Communications Commission (FCC) Statement	vii
International Electrotechnical Commission (IEC) Statement	vii
United Kingdom Telecommunications Safety Requirements	vii
European Union (EU) Statement	viii
Avis de conformité aux normes du ministère des Communications du Canada	viii
Canadian Department of Communications Compliance Statement	viii
VCCI Statement	viii
Radio Protection for Germany	ix
European Union (EU) Statement	x
VCCI Statement	x
Safety Notices	xi
Electrical Safety	xi
Laser Safety Information	xiii
Power Cables	xiv
About This Book	xvii
ISO 9000	xvii
Related Publications	xvii
Trademarks	xvii
Chapter 1. System Startup	1-1
Before You Begin	1-2
Unpacking Your System	1-3
Connecting the Cables	1-5
Starting the System	1-6
Finishing the Installation	1-8
Chapter 2. Using the System Unit	2-1
Starting the System Unit	2-1
Stopping the System Unit	2-1
Reading the Operator Panel Display	2-3
Using the Keyboards	2-4
Using the Three-Button Mouse	2-6
Using the 3.5-Inch Diskette Drive	2-10
Using the CD-ROM Drive	2-12
Using the Hot Swap Disk Drives	2-15
General Information for 8-mm Tape Drive	2-20
Using the 5.0GB 8-mm Tape Drive	2-24
General Information for 4.0GB 4-mm Tape Drive	2-31

Using the 4.0GB 4-mm Tape Drive	2-37
Chapter 3. System Management Services	3-1
Graphical System Management Services	3-1
Config	3-5
MultiBoot:	3-7
Utilities	3-10
Password	3-12
Error Log	3-16
RIPL	3-17
SCSI ID	3-21
Update	3-22
Text-Based System Management Services	3-24
Chapter 4. Service Processor Menus	4-1
Service Processor Menus	4-3
General User Menus	4-4
Privileged User Menus	4-6
Service Processor Functions and Features	4-24
Chapter 5. Installing Options	5-1
Safety Considerations	5-1
Handling Static-Sensitive Devices	5-3
Expansion Bays	5-4
Input/Output Connectors	5-5
Removing the Front Covers Only	5-6
Removing Both the Front and Side Covers	5-10
Removing the I/O Planar Cover	5-16
Option List	5-17
Installing Memory	5-18
Memory-Modules	5-24
Removing Memory	5-28
Installing Adapters	5-30
Removing Adapters	5-34
Upgrading or Adding a CPU Card	5-37
Installing Internal Drives	5-41
Installing a Disk Drive, Tape Drive, or CD-ROM in Bay A or Bay B	5-44
Installing a SCSI Disk Drive in Bank C, D, or E.	5-51
Installing a SSA Disk Drive in Bank C, D, or E.	5-55
Installing a SCSI Backplane in Bank D or E	5-59
Installing a SSA Backplane in Bank D, or E	5-66
Removing Internal Drives	5-81
Removing a Disk Drive, Tape Drive, or CD-ROM from Bay A or Bay B	5-82
Removing a SCSI Disk Drive from Bank C, D, or E	5-83

Removing a SSA Disk Drive from Bank C, D, or E	5-87
Installing a U-Bolt	5-91
Replacing the Front Covers	5-93
Replacing Both the Front and Side Covers	5-96
Replacing the I/O Planar Cover	5-101
Chapter 6. Using the Online and Standalone Diagnostics	6-1
Sources for the Diagnostics	6-1
Standalone and Online Diagnostics Operating Considerations	6-1
Online Diagnostics Modes of Operation	6-9
Standalone Diagnostic Operation	6-12
Location Codes	6-14
Physical Location Codes	6-14
AIX and Physical Location Code Reference Table	6-15
AIX Location Codes	6-20
Chapter 7. Using the Service Aids	7-1
Introduction to Service Aids	7-3
AIX Shell Prompt Service Aid	7-4
Backup/Restore Media Service Aid	7-4
Configure Remote Maintenance Policy Service Aid	7-4
Configure Ring Indicate Power On Policy Service Aid	7-6
Configure Surveillance Policy Service Aid	7-7
Configure Reboot Policy Service Aid	7-7
Save or Restore Hardware Management Policies Service Aid	7-9
Diagnostic Package Utility Service Aid	7-9
Dials and LPFK Configuration Service Aid	7-10
Disk Based Diagnostic Update Service Aid and Update Disk Based Diagnostic Task	7-10
Disk Media Service Aids	7-10
Disk Maintenance Service Aid	7-12
Diskette Media Service Aid	7-13
Display or Change Configuration or Vital Product Data (VPD) Service Aid	7-13
Display and Change Diagnostic Test List Service Aid	7-15
Display Previous Diagnostic Results Service Aid	7-16
Display Test Patterns Service Aid	7-16
Enhanced SCSI Display Configuration Service Aid	7-16
Generic Microcode Download Service Aid	7-17
Hardware Error Report Service Aid and Display Hardware Error Log Task	7-17
ISA Adapter Configuration Service Aid	7-17
Machine Check Error Log Service Aid	7-18
Microcode Download Service Aid	7-18
Periodic Diagnostics Service Aid	7-19
SCSI Bus Analyzer Task	7-20

SCSI Tape Utilities Service Aid	7-22
Service Hints Service Aid	7-23
Update System or Service Processor Flash Service Aid	7-23
Display Firmware Device Node	7-24
Display Resource Attributes	7-24
7135 RAIDant Array Service Aid	7-25
PCI RAID Physical Disk Identify	7-25
Chapter 8. Using the System Verification Procedure	8-1
Step 1. Considerations before Running This Procedure	8-1
Step 2. Loading the Diagnostics	8-2
Step 3. Running System Verification	8-3
Step 4. Additional System Verification	8-3
Step 5. Stopping the Diagnostics	8-4
Chapter 9. Hardware Problem Determination	9-1
Problem Determination Using the Standalone or Online Diagnostics	9-1
Problem Determination When Unable to Load Diagnostics	9-10
Appendix A. System Records	A-1
Record the Identification Numbers	A-1
Device Records	A-2
Appendix B. Replacing the Battery	B-1
Appendix C. Service Processor Setup and Test	C-1
Testing the Setup	C-2
Appendix D. Modem Configurations	D-1
Sample Modem Configuration Files	D-1
Configuration File Selection	D-2
Seamless Transfer of a Modem Session	D-6
Modem Configuration Samples	D-9
Appendix E. Service Processor Operational Phases	E-1
Index	X-1
Reader's Comments — We'd Like to Hear From You	X-3